
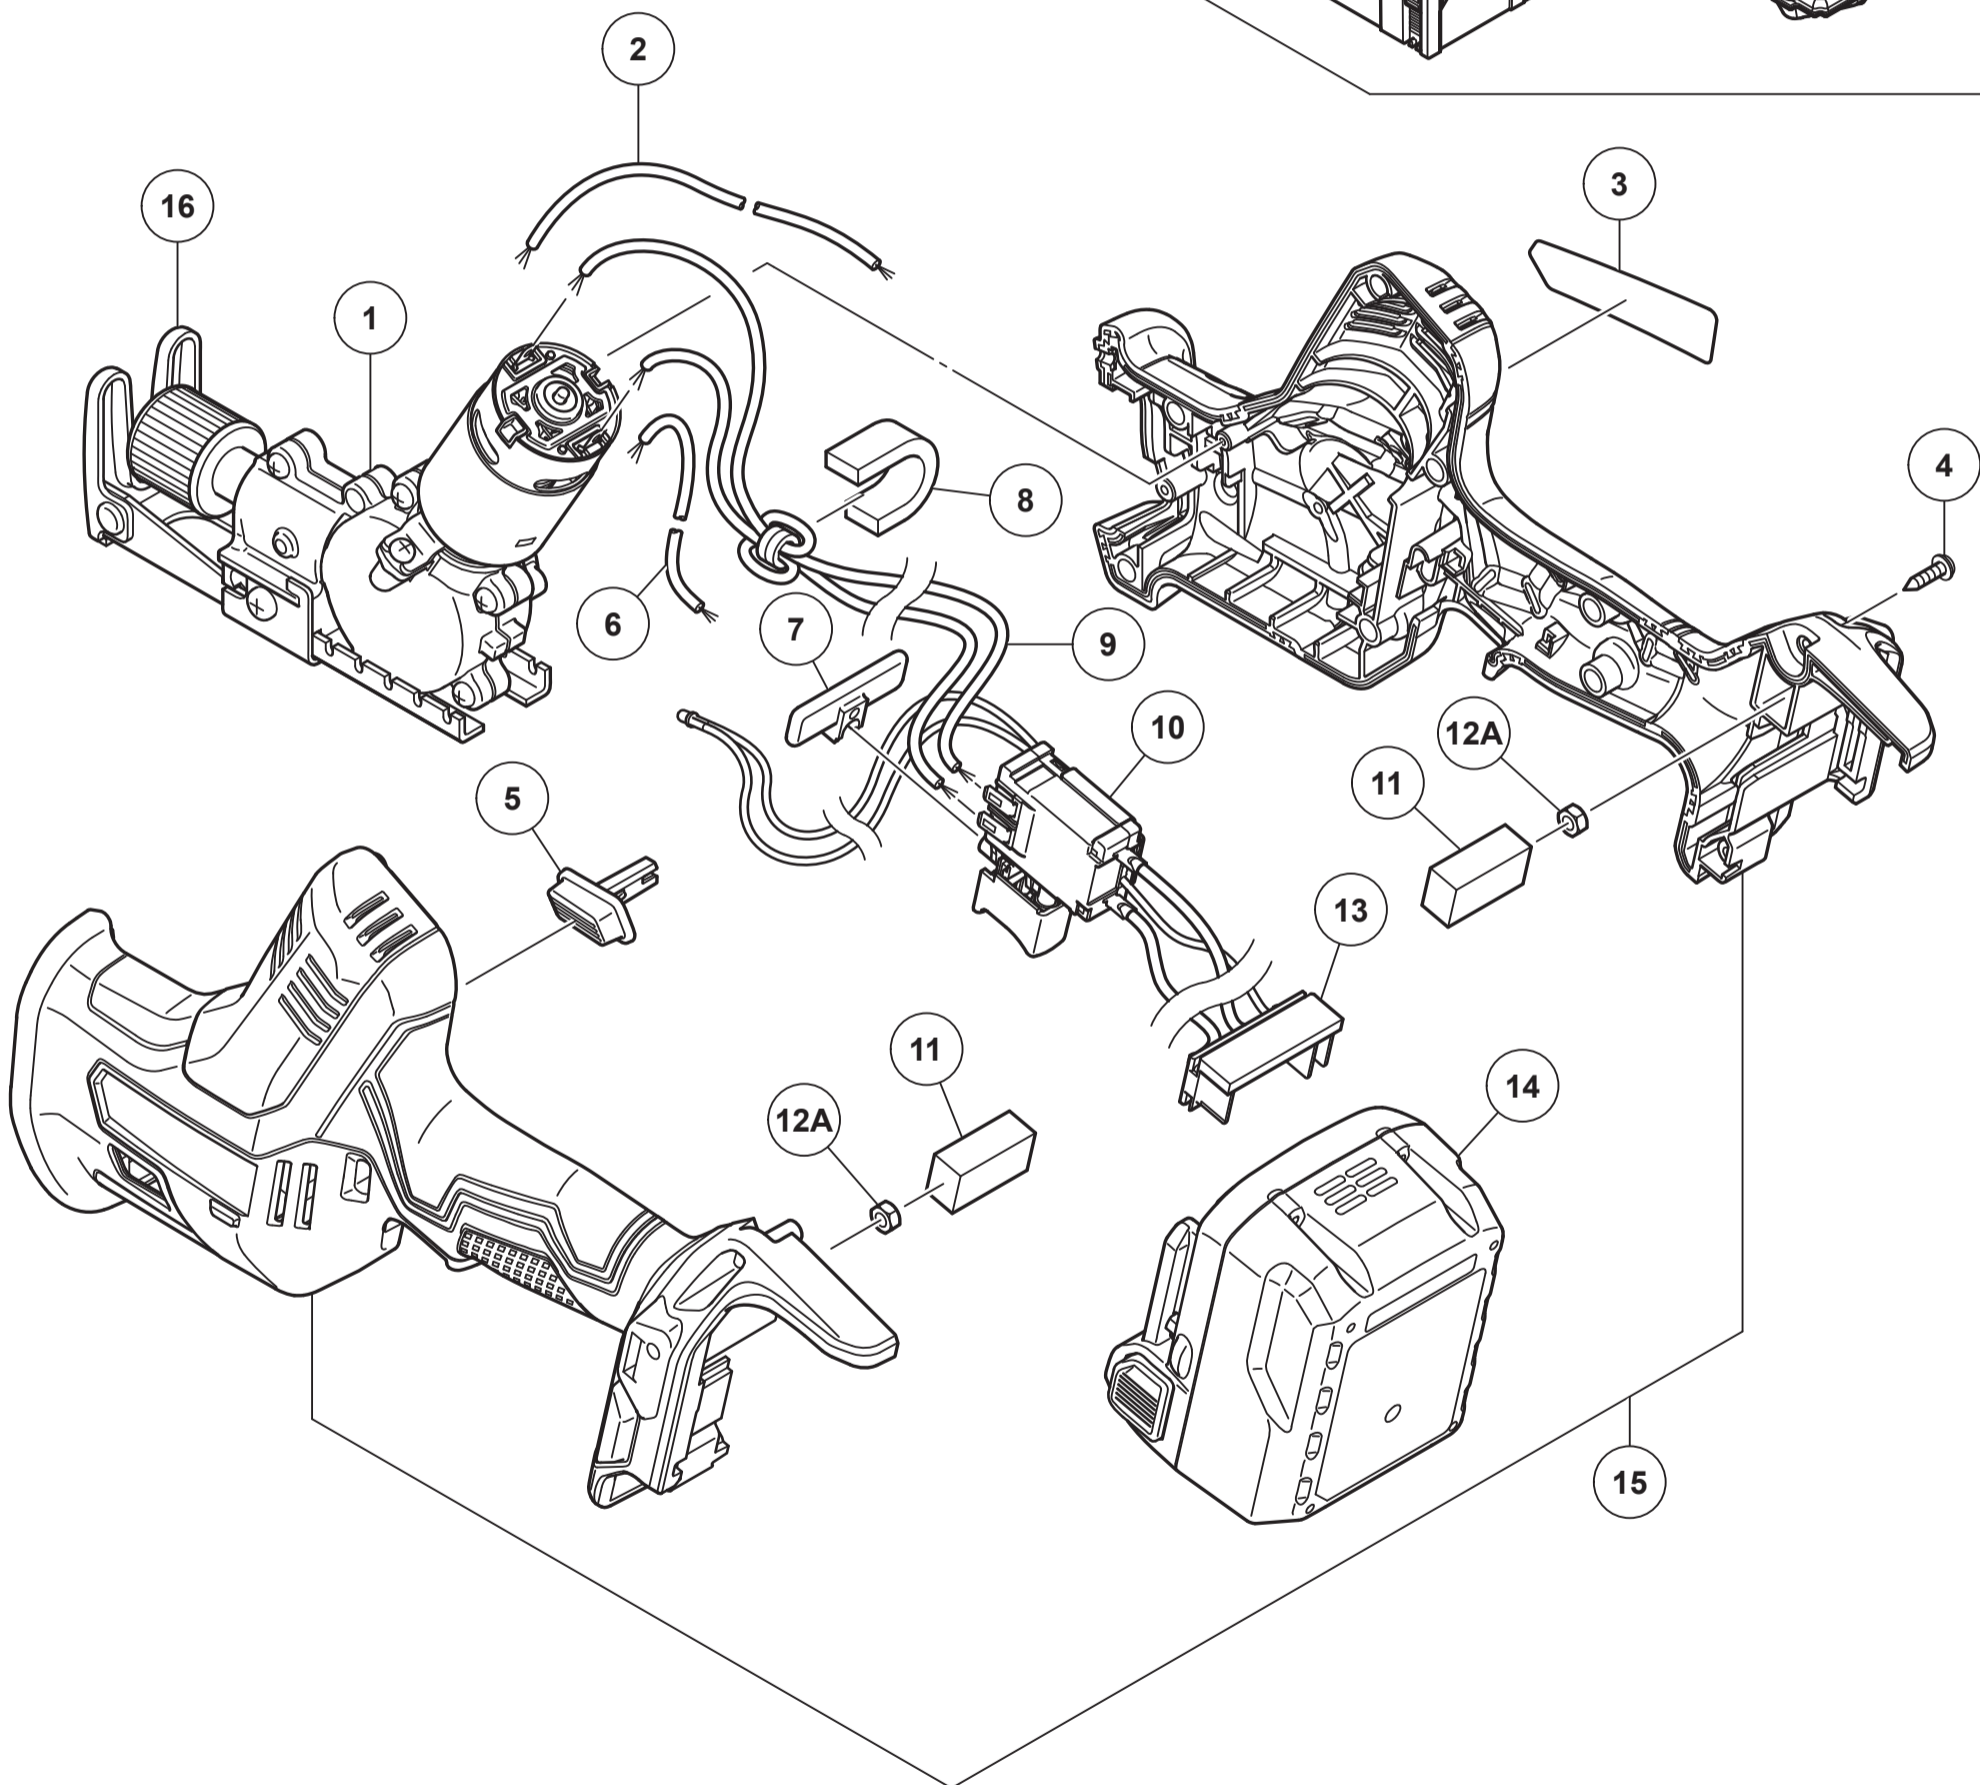


# HIKOKI

## CORDLESS RECIPROCATING SAW CR18DA

Item No.	Code No.	Description	No. Used	Remarks
1	376379	GEAR BOX	1	INCLUD.16
3		NAME PLATE	1	
4	313687	TAPPING SCREW (W/FLANGE) D3X16 (BLACK)	9	
5	376377	LOCKING KNOB	1	
7	329548	PUSHING BUTTON (A)	1	
*8	375921	SUPPORT (D)	1	FOR EUROPE,GBR,AUS,NZL
*9	376554	INTERNAL WIRE FERRITE SET	1	FOR EUROPE,GBR,AUS,NZL
10	376380	DC-SPEED CONTROL SWITCH	1	
11	328644	PACKING	2	
12A	322709	NUT M4 (BLACK)	2	
13	331399	BATTERY TERMINAL	1	
14	376029	BATTERY BSL 1850C (EUROPE,AUS,NZL)	2	INCLUD.502
*15	376378	HOUSING (A).(B) SET	1	
16	376751	BASE	1	
		STANDARD ACCESSORIES		
501		CHARGER (MODEL UC18YFSL)	1	
502	329897	BATTERY COVER	1	
503	958185	SABER SAW BLADES NO.5 (5 PCS.)	1	
504	318617	SABER SAW BLADES NO.107 150L P.24 (5 PCS)	1	
505	336471	CASE ASS'Y (STACKABLE 2)	1	INCLUD.506-508
506	336472	LATCH	4	
507	336473	HANDLE	1	
508	336474	HINGE	2	
509	376551	INNER TRAY	1	
		OPTIONAL ACCESSORIES		
601	959611	SABER SAW BLADES NO.4 (5 PCS.)	1	
602	318611	SABER SAW BLADES NO.101 150L P.10 (5 PCS)	1	
603	318612	SABER SAW BLADES NO.102 228L P.10 (5 PCS)	1	
604	318613	SABER SAW BLADES NO.103 150L P.14 (5 PCS)	1	
605	318614	SABER SAW BLADES NO.104 228L P.14 (5 PCS)	1	
606	318618	SABER SAW BLADES NO.108 228L P.24 (5 PCS)	1	
607	324818	SABER SAW BLADES NO.109 150L P.18 (5 PCS)	1	
608	324819	SABER SAW BLADES NO.110 228L P.18 (5 PCS)	1	
609	318619	SABER SAW BLADES NO.121 305L P.6 (5 PCS.)	1	
610	318620	SABER SAW BLADES NO.131 305L P.10/14(5PC)	1	
611	318621	SABER SAW BLADES NO.132 203L (5 PCS.)	1	
612	370683	CURVED BLADES NO.141(S)150L P.14(3 PCS.)	1	
613	370684	CURVED BLADES NO.142(S)200L P.14(3 PCS.)	1	
614	370685	CURVED BLADES NO.143(S)250L P.14(3 PCS.)	1	
615	371902	CURVED BLADES NO.158 200L P.8 (3 PCS.)	1	

\* ALTERNATIVE PARTS

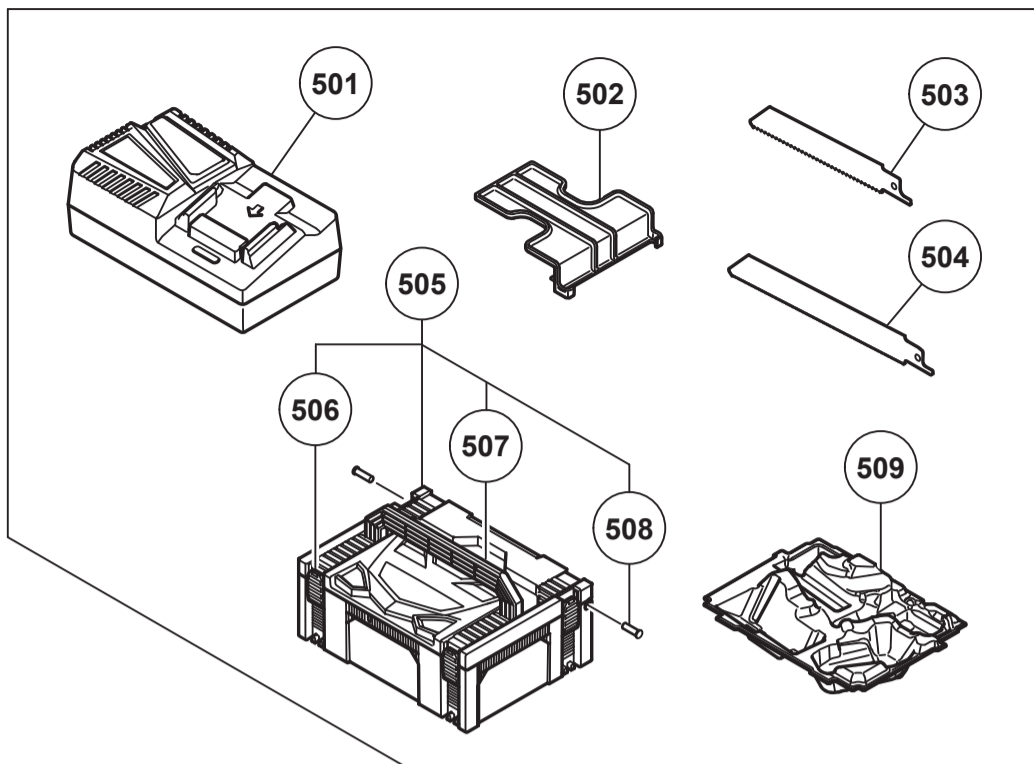

MODEL  
CR18DA