



Nr.	Part nr.	Name
001	RN56427052	Lcd assy DWD181
002	RN28907880	Schakelaar DWD181
003	RN28907898	Diepteplaat DWD181
004	RN28907901	Pakking A DWD181
005	RN28907928	Sensor assy DWD181
006	RN28907944	Behuizing L DWD181
007	RN28907960	Behuizing R DWD181
008	RN28907979	Pakking B/C DWD181
009	RN28907995	Batterijhouder DWD181
010	RN28908002	Circuit led DWD181
011	RN28908010	Frameset led DWD181
012	RN28908029	Onderhuis DWD181
013	RN28908037	Wielset DWD181
014	RN28908045	Pakking D DWD181
015	RN28908053	Schroef 3x16 DWD181
016	RN28908061	Schroef 3x8 DWD181
017	RN28929964	Schroef 2,3x8 DWD181
018	RN28929964	Schroef 2,3x8 DWD181
019	RN28908061	Schroef 3x8 DWD181
020	RN28908053	Schroef 3x16 DWD181